

PROWOOD

garden furniture

Montážní(y) návod 12.

Assembly instructions 12.


Montageanleitung 12.

Istruzione per il montaggio 12.

Usine d'assemblage 12.

Manual de montaje 12.

Руководство монтажа 12.

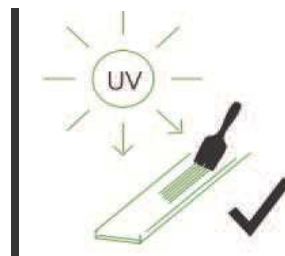


OWATROL PCD 91




OWATROL AQUADECKS


1.

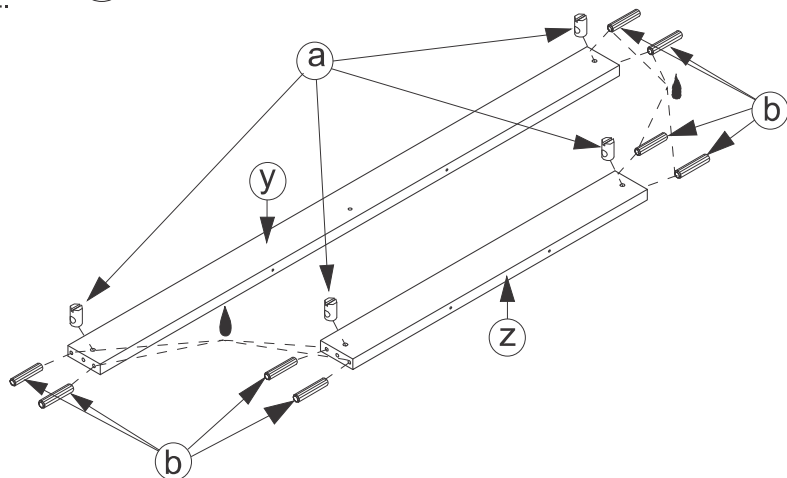


2.

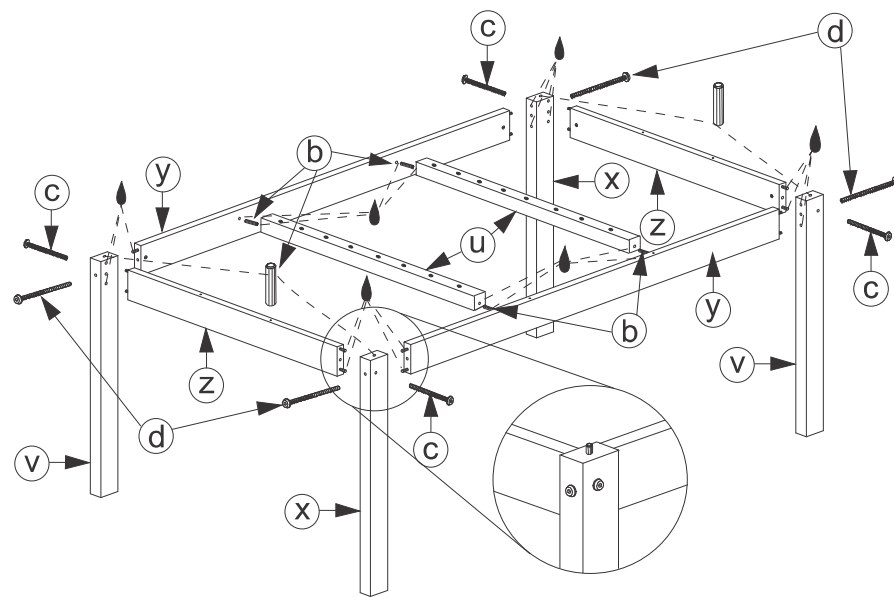


3.

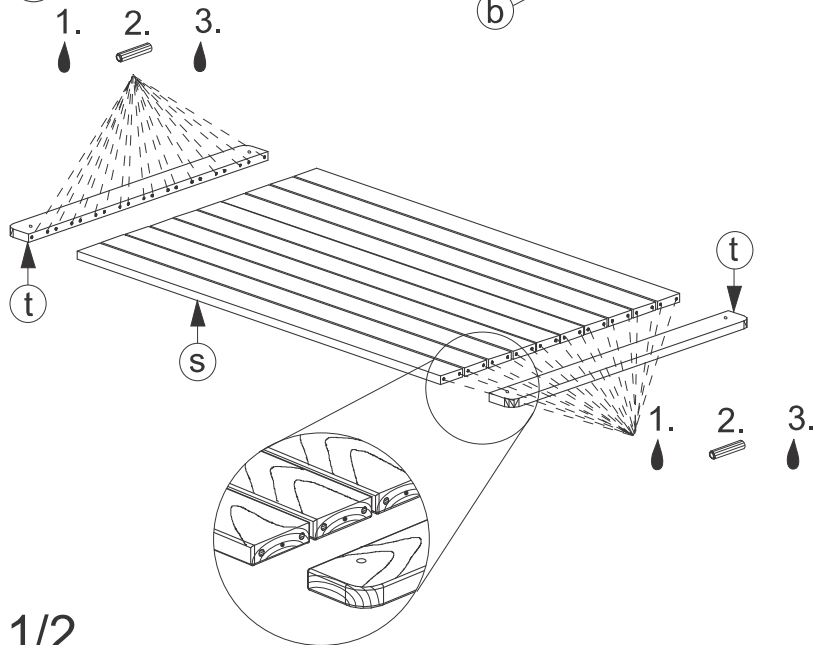







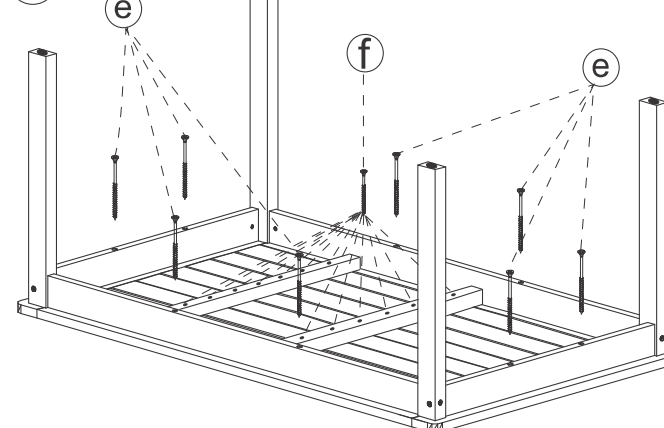
4.

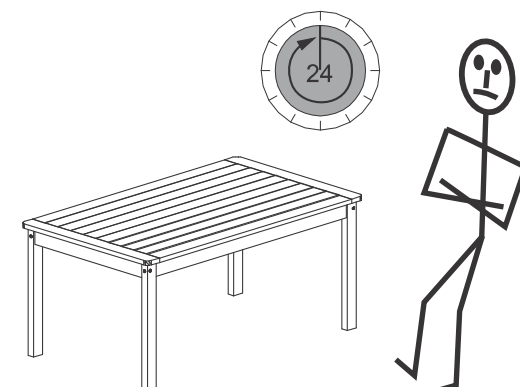

5.



s		26x92x1816	10x
t		26x92x1000	2x
u		42x42x872	2x
v		42x68x729	2x
x		42x68x729	2x
y		26x92x1804	2x
z		26x92x856	2x

