

# PROWOOD

garden furniture

## Montážní(y) návod 7.

Assembly instructions 7.



Montageanleitung 7.

Istruzione per il montaggio 7.

Usine d'assemblage 7.


Manual de montaje 7.
















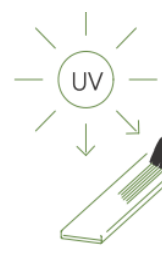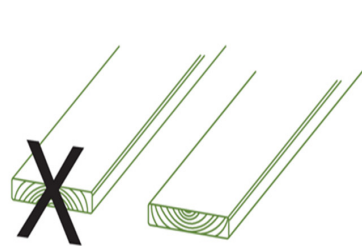Руководство монтажа 7.





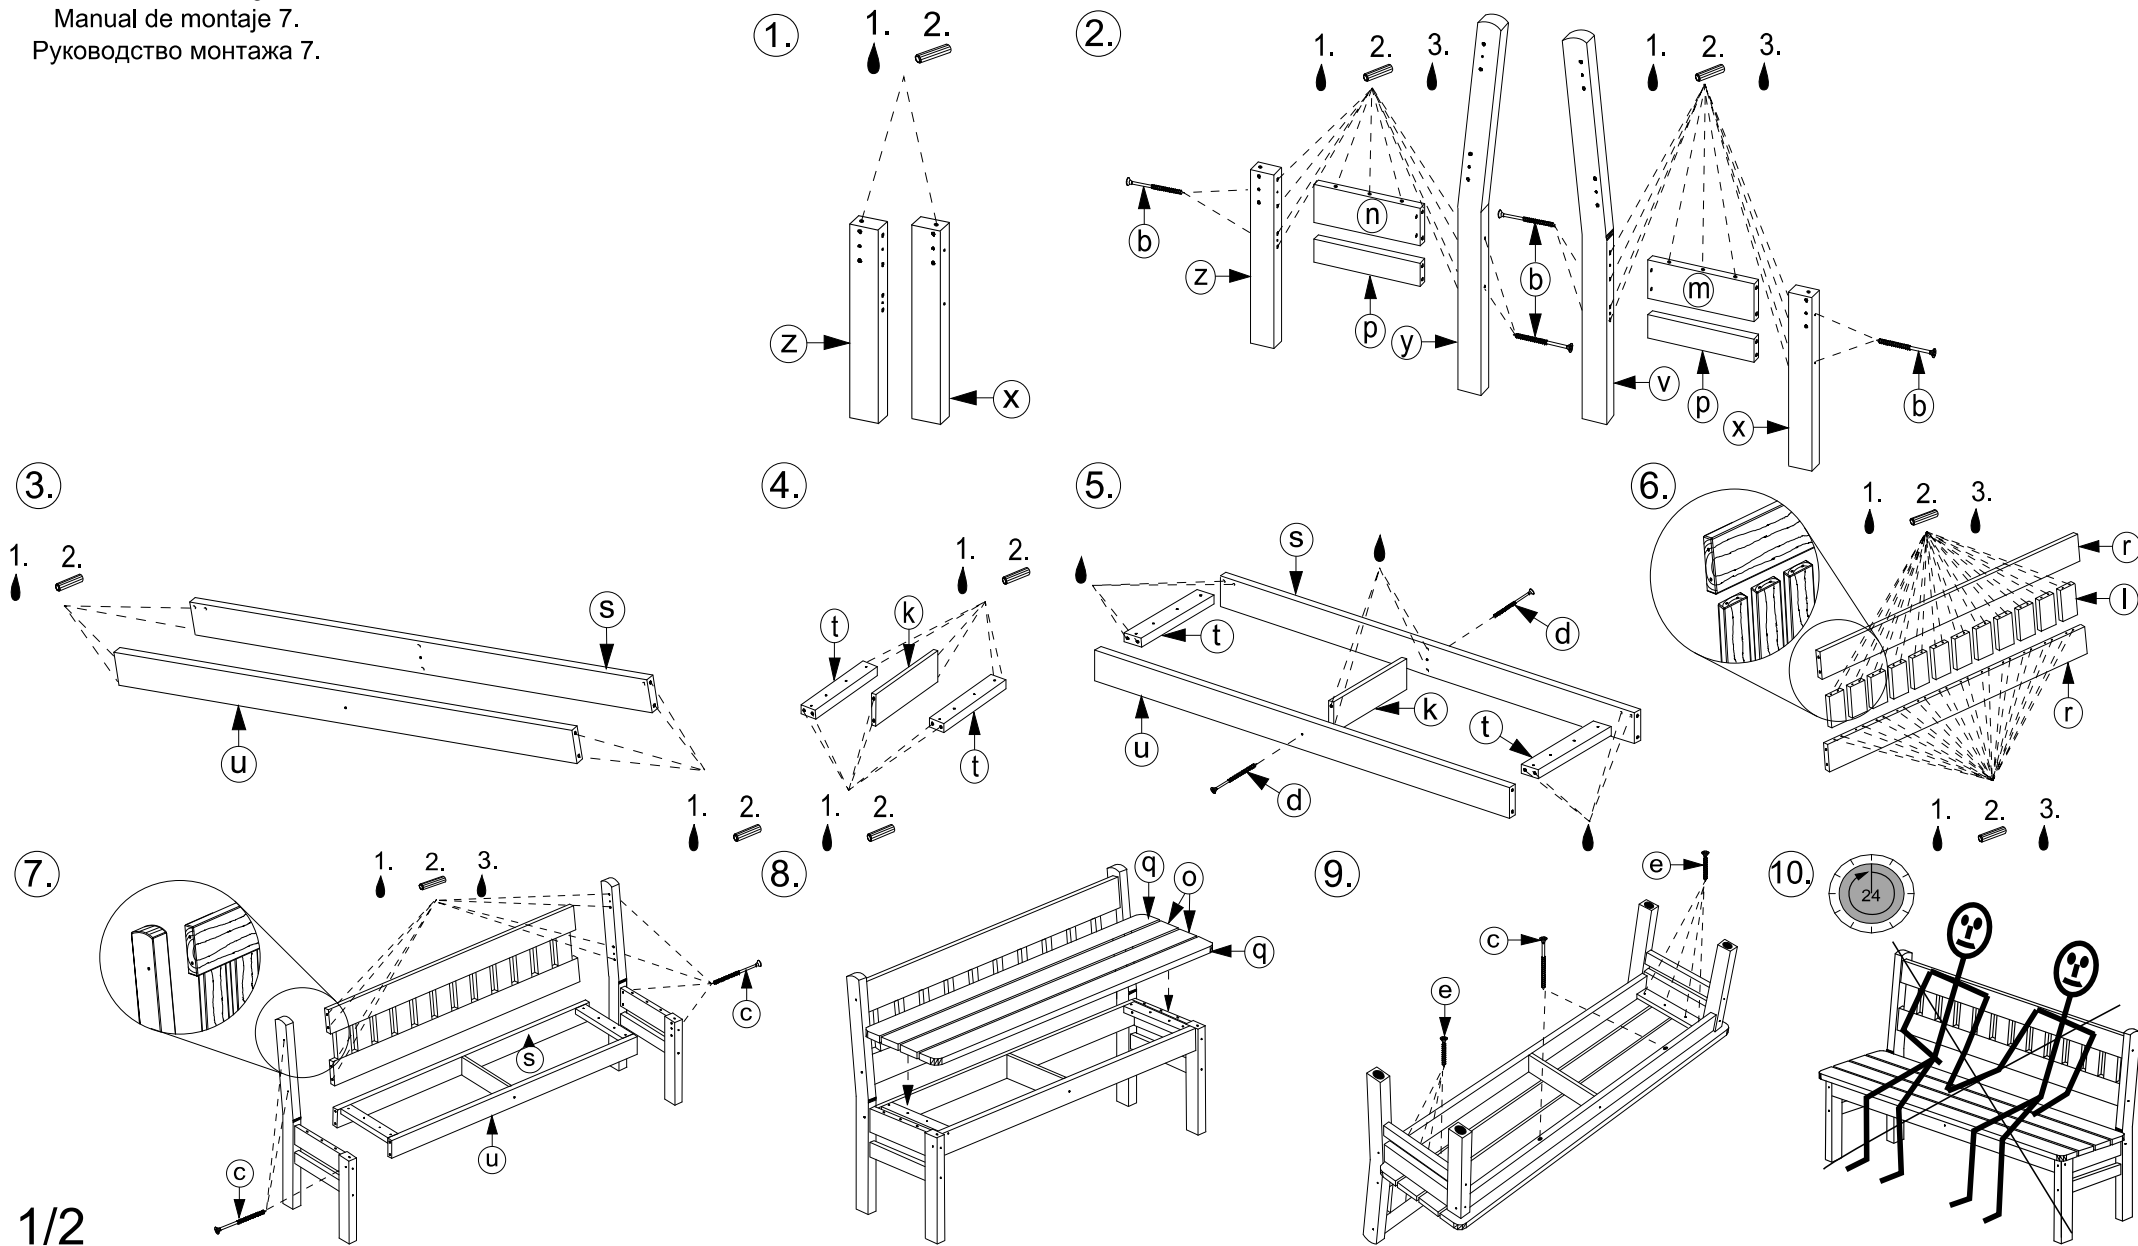




OWATROL PCD 91
















OWATROL AQUADECKS







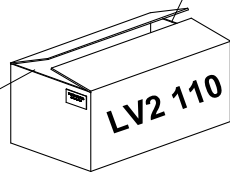

k		26x92x309	1x
l		26x92x170	8x
m		26x92x302	1x
n		26x92x302	1x
o		26x92x1100	2x
p		26x56x302	2x
q		26x92x1100	2x
r		26x117x956	2x
s		26x92x972	1x
t		26x56x309	2x
u		26x92x956	1x
v		42x68x920	1x
x		42x68x419	1x
y		42x68x920	1x
z		42x68x419	1x

-  1x  
 a 84x  
 b 8x  
 c 8x  
 d 2x  
 e 8x



k		26x92x309	1x
l		26x92x170	11x
m		26x92x302	1x
n		26x92x302	1x
o		26x92x1450	2x
p		26x56x302	2x
q		26x92x1450	2x
r		26x117x1306	2x
s		26x92x1322	1x
t		26x56x309	2x
u		26x92x1306	1x
v		42x68x920	1x
x		42x68x419	1x
y		42x68x920	1x
z		42x68x419	1x

-  1x  
 a 96x  
 b 8x  
 c 8x  
 d 2x  
 e 8x

